



INSTALLATION Wall Mount

French Cleats for horizontal / landscape framed LightPanels*

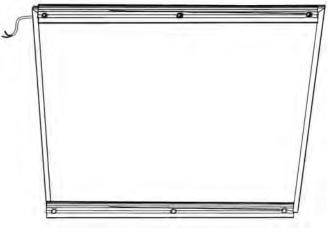


A French Cleat will be attached to the top and bottom of the framed LightPanel. Its corresponding French Cleat will be provided by EOS separately for in-field wall installation.




11mm

back of panel

French Cleats for vertical / portrait framed LightPanels*

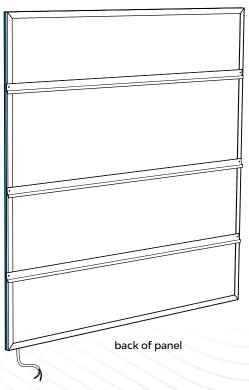



French Cleats will be attached across the width of the framed LightPanel at appropriate height intervals. Its corresponding French Cleat will be provided by EOS separately for in-field wall installation.

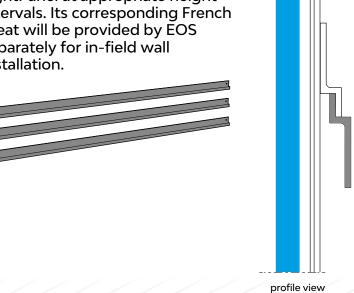


*For use with Deco LightPanels, AURA Complete Solutions, and Media Frame Ad Boxes.



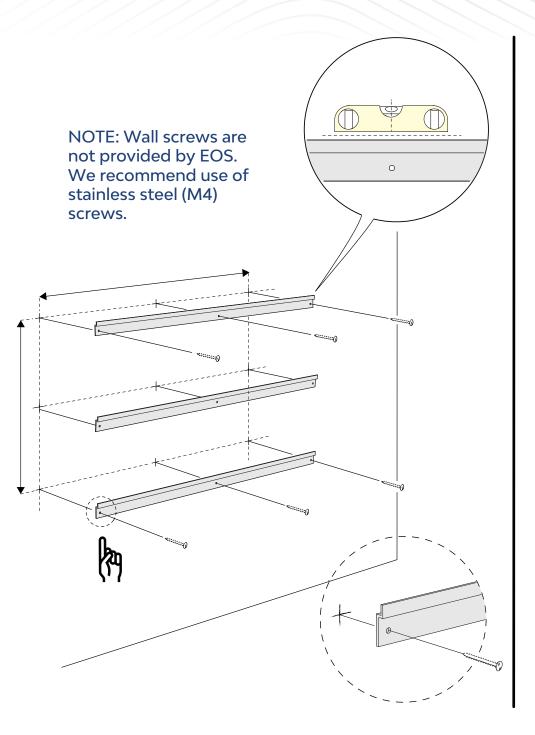

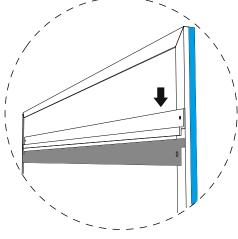

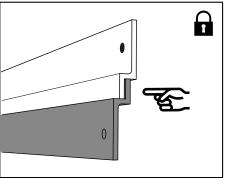




Fix the French Cleats to the wall with screws or other suitable fixing systems paying attention to:


- Positioning the brackets parallel to each other, with the help of a calibration tool.
- The "head" of the screw while fixing the brackets: it must not protrude.
- Fixing the French Cleats in an area which is 200 mm less than the external dimension of the panel.




OPTIONAL MOUNTING METHOD FOR WALL **APPLICATIONS:**


Keyhole Hooks

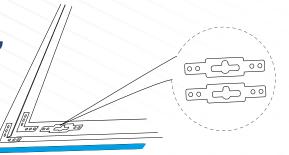




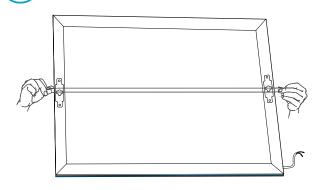


Using that width, measure your desired hanging height from the floor in both keyhole locations.

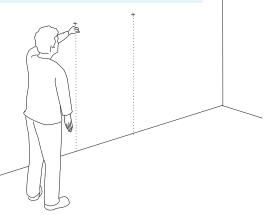

Use a string or ruler to connect the two holes' locations on wall, then use a level to be sure they are exactly accurate, or adjust as needed.

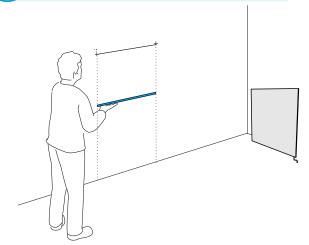

Put your fasteners into the wall at your two precisely-measured locations (nails or screws).

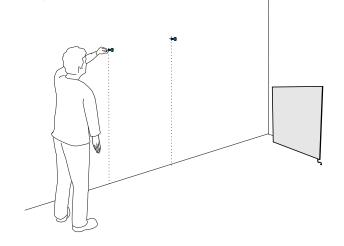

Carefully lift your panel (with two or more people, if necessary) to insert the fasteners into the keyhole hooks' holes.

